



VERSION 1

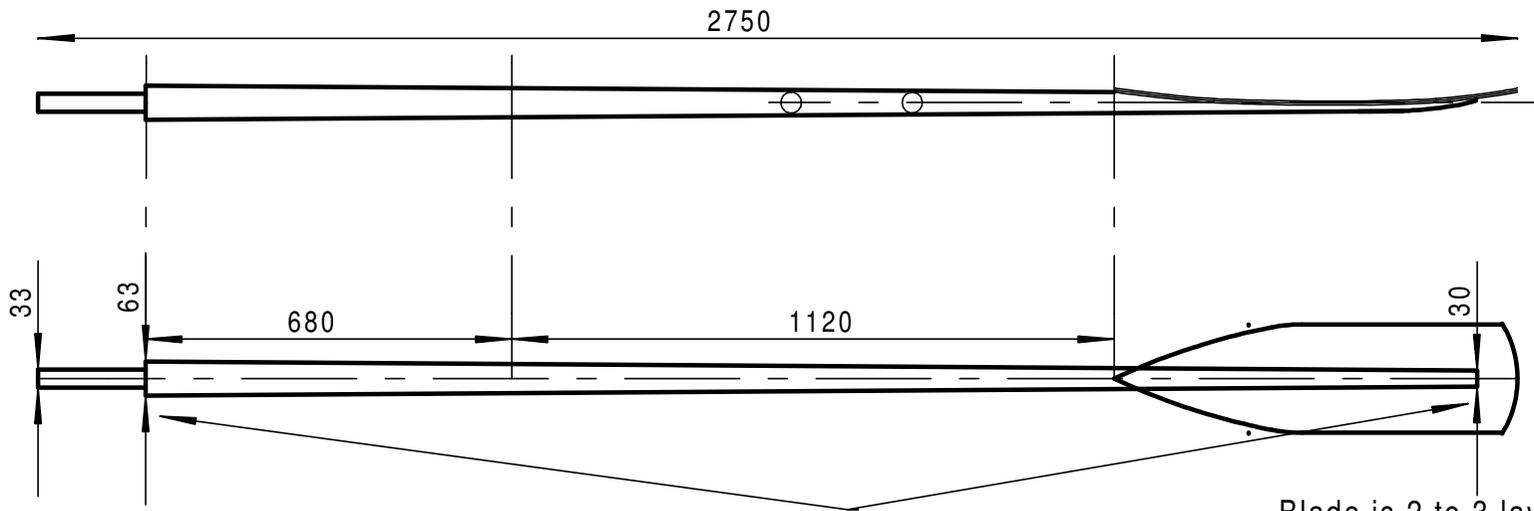

Loom is straight taper between these points.

Blade is 2 to 3 layers 3mm gaboon. Approx same dims as Bolger's but a nicer shape.


VERSION 2 - more economical in timber but more labour.

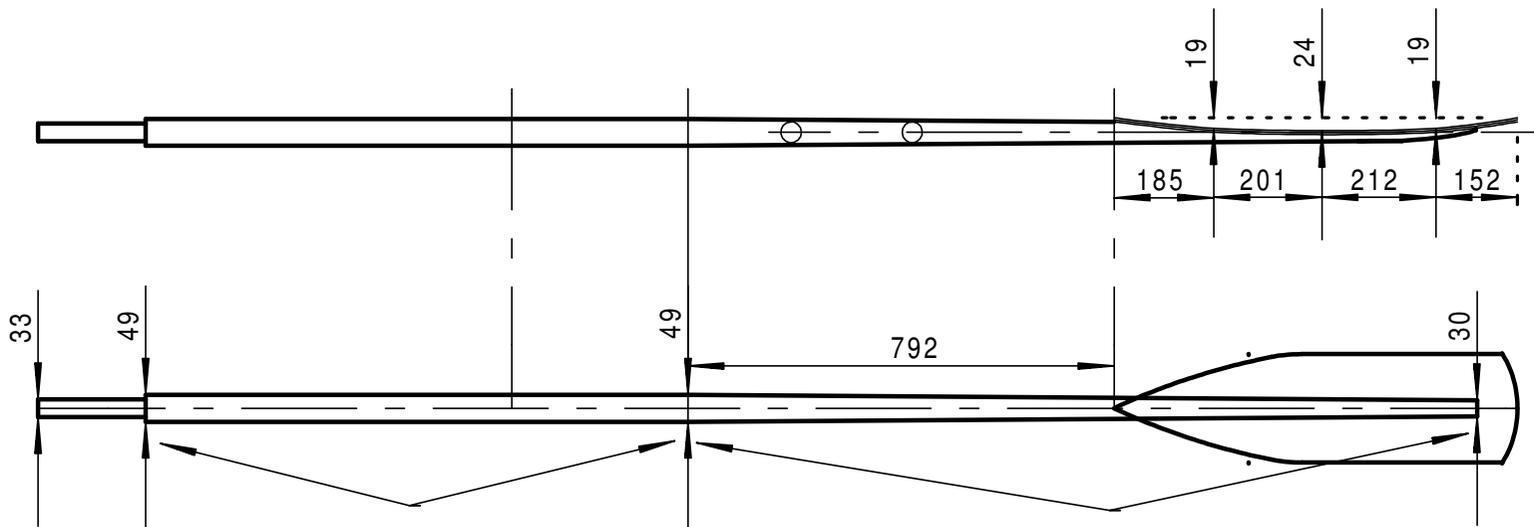

No Taper in this section 300 gsm glass between these points - 2 layers

Loom is straight taper between these points.

Cut scoop and pre laminate blade to these dims.

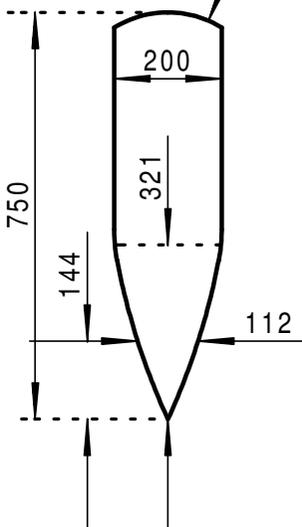

BLADE DIM'S  
Cut 6mm oversize to allow for curved blade