



VERSION 1

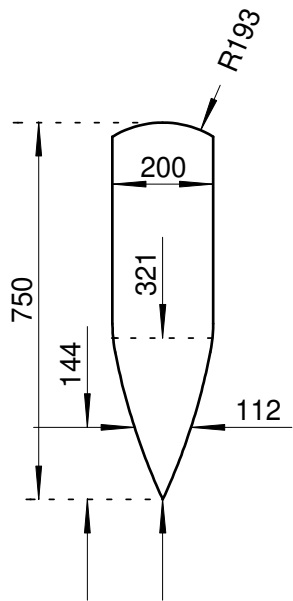


BLADE DIM'S
Cut 6mm oversize
to allow for curved
blade
2 layers x 3mm ply

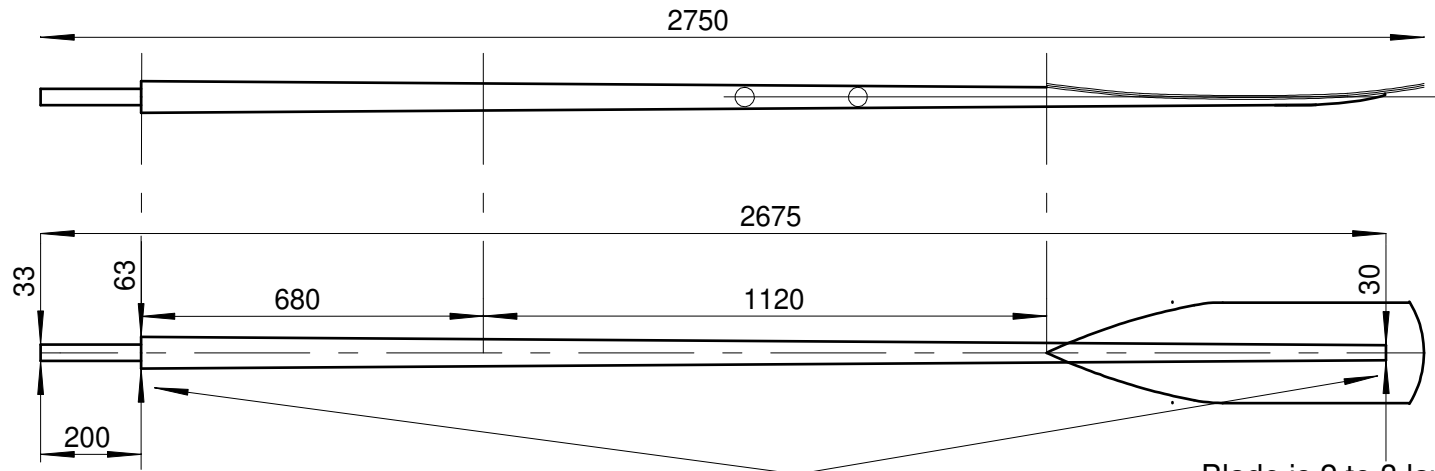

Loom is straight taper
between these points.

Blade is 2 to 3 layers
3mm gaboon. Approx
same dims as Bolger's
but a nicer shape.

VERSION 2 - more economical in timber but more labour.

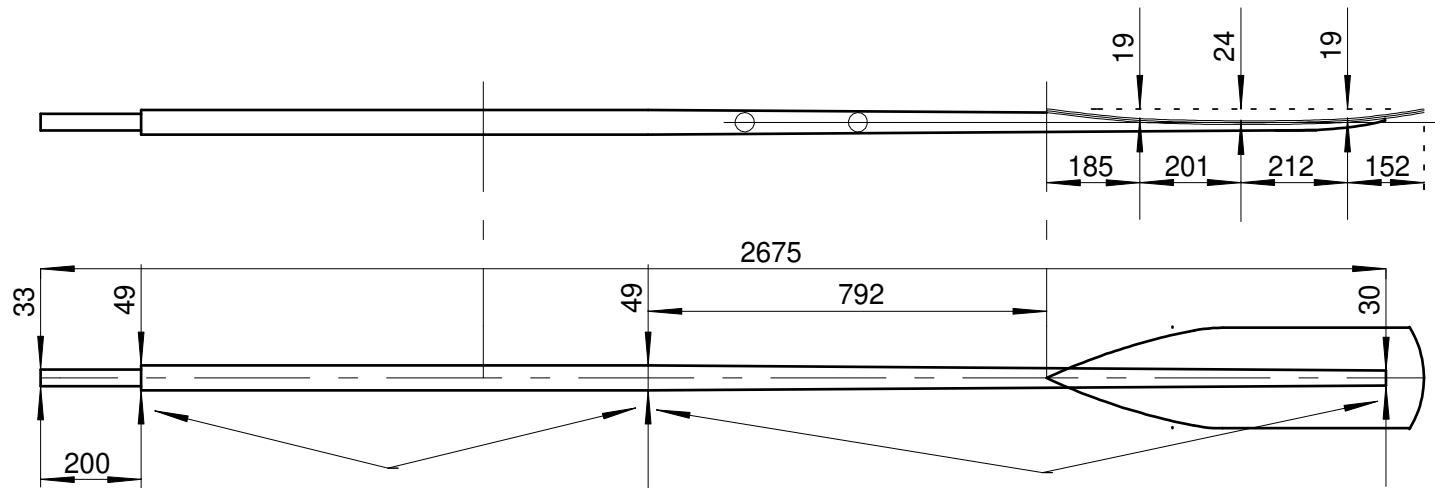

No Taper in this section
300 gsm glass between
these points - 2 layers

Loom is straight taper
between these points.

Cut scoop and
prelamine blade
to these dims.